LASER ENGRAVING MACHINE LENS MAINTENANCE STEPS

Posted on 2023-08-14 by redsail



Category: Laser Engraver News



- 1). Hand wash, blow dry or leave to dry.
 - 2). Put on finger cots.
- 3). Gently take out the lens for inspection.
- 4). Blow off the dust on the surface of the lens with an air balloon or nitrogen.
 - 5). Use a cotton ball dipped in the mirror liquid to stick away the residue.
- 6). Gently wipe the lens with a proper amount of lens cleaning liquid on the lens cleaning paper, and do not wipe it in a rotating manner.
- 7). Replace the lens wiping paper, and then repeat the previous step, do not reuse the same piece of lens wiping paper.
 - 8). Blow the mirror surface clean with an air balloon.