## REASONS AND SOLUTIONS FOR ABNORMAL RESET OF LASER ENGRAVING MACHINE

Posted on 2023-08-14 by redsail



**Category:** Laser Engraver News



1. Check whether the sensor is dusty, poorly connected or damaged (wipe off the dust on the sen	ısor
or replace it);	

- 2. Check whether the data cable of the flexible guide belt is in poor contact or damaged (trim the data cable and re-plug or replace the data cable);
- 3. Check whether the ground wire contact is reliable or whether the high-voltage wire is damaged (re-ground or replace the high-voltage wire);
  - 4. Poor contact of the motor wire.